MIIA
Windows TAB 7” 3G

MIIA MWT-743G

ENG User Manual

miia®

INTRODUCTION

Thank you for your choosing the new Miia Windows Tab MWT-743G.
This guide serves to enable users to get to know and familiar with our product as soon as possible. Here we have made a brief introduction to the key layout and definitions in figures and words.

CONTENTS

I. Precautions before Use 4

II. Key Layout and Definitions 5

III. Introduction to Desktop 6

1. Windows 8.1 Start Screen 6

2. Image Slide Application 7

3. apps Introduction 9

4. Charm menu column 10

5. Double Screen Application 12

IV. Basic Operations 13

1. Dormancy, restart, and power off 13

2. Security Management 13

Product Specification 14

I. PRECAUTIONS BEFORE USE

This production is suitable for use in non-tropic areas below 2,000 meters, and the mark in the nameplate indicates the product is suitable for use in non-tropic areas.

2. Prevent the Tablet PC from falling to the ground or being strongly impacted otherwise.

3. Do not use it in the long term in any environment where the air is too cold, too hot (<35°C), too humid or with too much dust. Do not expose the Tablet PC to sunlight.

4. Avoid using it in the strong magnetic and strong static environment as much as possible.

5. Once any water or other liquid splashes onto the Tablet PC, close it immediately and do not use it until it dries out.

6. Do not clean the Tablet PC with any detergent containing chemical element or other liquid to avoid causing damage due to corrosion and becoming damp. If cleaning is really necessary, clean it with dry soft cloth tissue paper.

7. Our company shall not bear any and all responsibilities for loss or deletion of material inside the machine caused due to abnormal software and hardware operation, maintenance or any other accident.

8. Please back up your important material at any time to avoid loss.

9. Please do not disassemble the Tablet PC by yourself; otherwise you will lose the right to warranty.

10. This product supports the overwhelming majority of mainstream brands of 3G DONGLE network cards. The cases for 3G Dongle may be different. It is suggested that you test it to make sure it is OK before buying it.

11. This user manual will give instructions for iwork8 &iplay8 separately.Before using the product,please carefuly read the operating instructions.The iwork8 runs windows8.1 OS,while the iplay8 runs Android OS.

12. Replacement with incorrect type batteries may cause explosion. Make sure to use original batteries.

II. KEY LAYOUT AND DEFINITIONS

Descriptions for key function:

1 • Power key	• Press this key for a long time to start up • Under starting up state, press this key for a long time to pop up shutdown option • Under starting up state, press this key to close the screen
2 • Volume key	• Press it can increase or decrease machine volume

III. INTRODUCTION TO DESKTOP

1. Windows 8.1 start image

On the start screen, you can see many programs fixed in the image. These application programs are displayed in the form of “magnet”. As long as you click them, you can easily visit them.

You need to log on your Microsoft account before the application program completely runs.

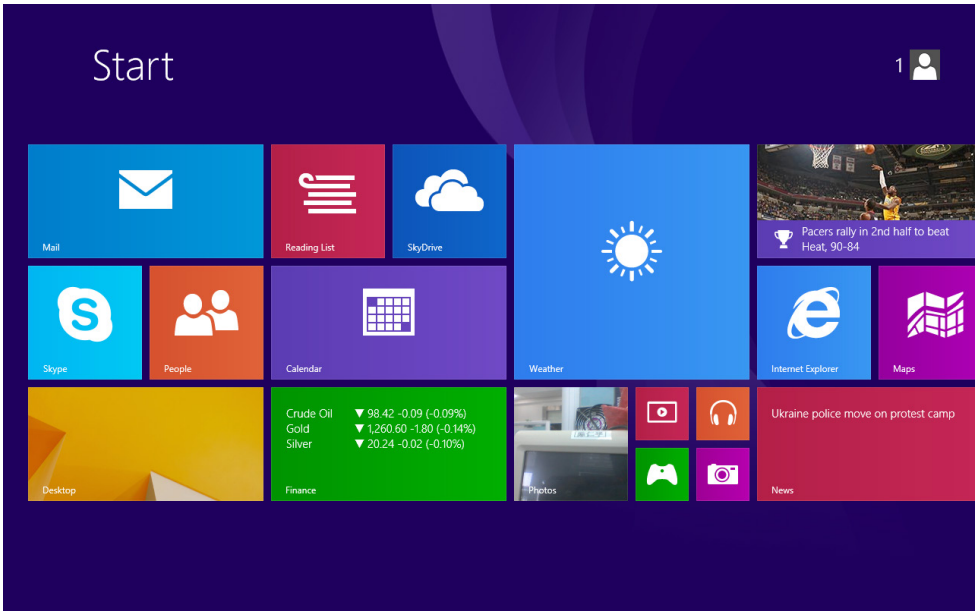

2. Image slide applications

Slide to right

Slide to the right from the left side of the screen to start the application program in running.

Slide to left

Slide to the left from the right side of the screen to start Charm menu column.

Reduce

On the touch screen, narrow two fingers to reduce the image.

Enlarge

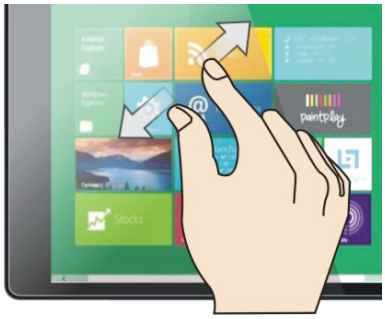

On the touch screen, widen two fingers to enlarge the image.

Slide downward

In start screen, slide from the top of the screen view all application programs

Slide with finger

In start screen, slide finger right and to left to move the image.

Slide upward

In the start screen, slide upward from the bottom of the screen to visit all application program (APPS) interfaces.

3. Introduction to app Interface

Besides the application programs already fixed on the start screen, you can also start other application programs in all application programs, such as other software application programs attached to the Tablet PC.

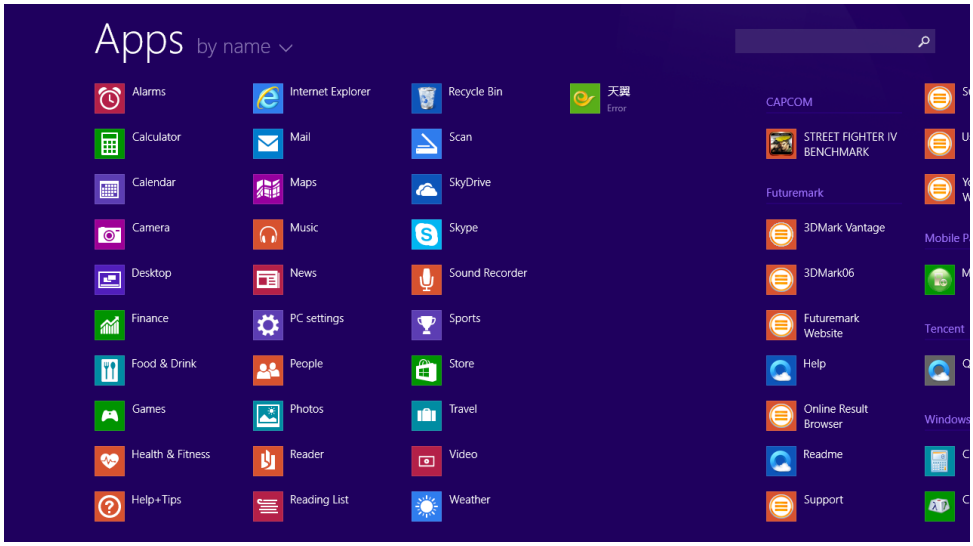

If you want to fix more application programs on the start interface, see the operation in the figure below, (1) lightly touch, press and hold the application program magnet for about one second and then let go, and select (2) to fix to the start screen.

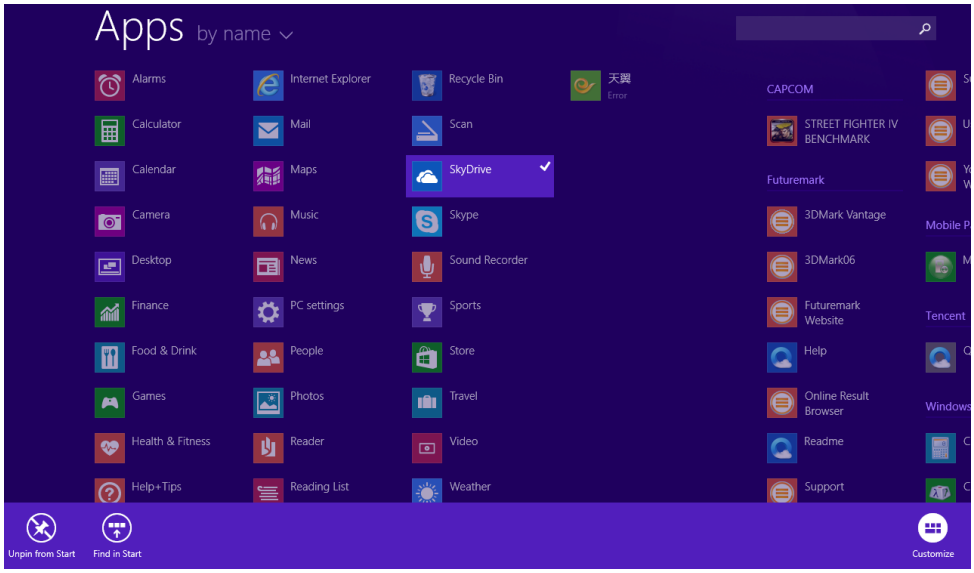

Conversely, if you want to cancel or delete a certain application in the start screen, (1) lightly touch, press and hold the application program magnet for about one second and then let it go and run, and select (2) attribute column to cancel the programs such as fixation and deletion and then it can be completed.

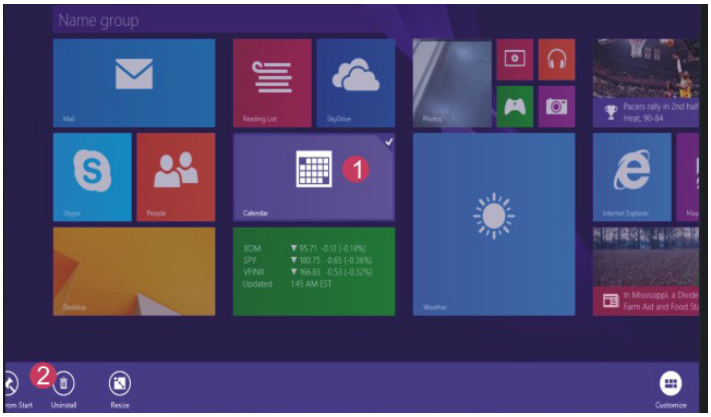

4. Charm menu column

Slide it to the left from the right side of the screen to start Charm menu column, including: Start, Device, Setup, Share, and Search Program.

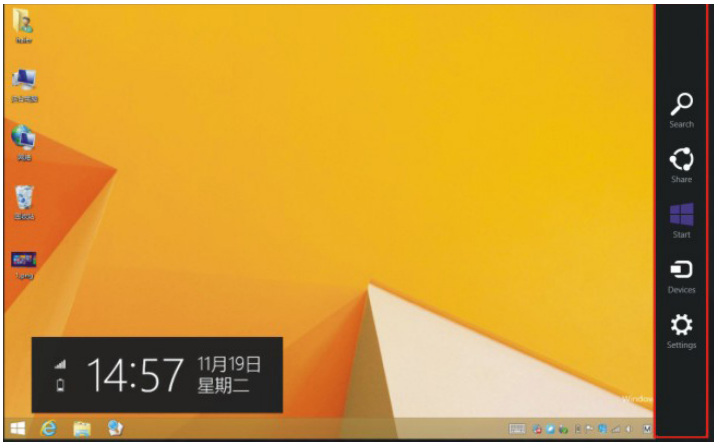

Can let you search the files and application programs in the Tablet PC.

Can let you share the program through social exchange website or e-mail.

Can return to the start screen. From the start screen, you can also use this function to return the application program that is opened in the latest.

Can let you read, write and share files, connect external screen or printer with the device connected to the Tablet PC.

Can let you set up the Table PC.

Search menu

Share menu

Device Menu

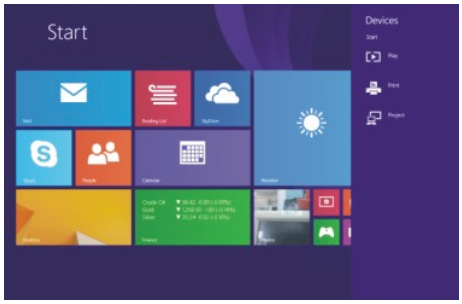

Set up Menu

5. Dual-Screen Application

On my computer in (Figure 1), slide it inward from the left side of the screen, drag it and hold. Let go when seeing double interfaces appear.
In (Figure 2), press the partition button on the middle partition line and drag right and left to partition the display proportion of the double screens.

Figure 1

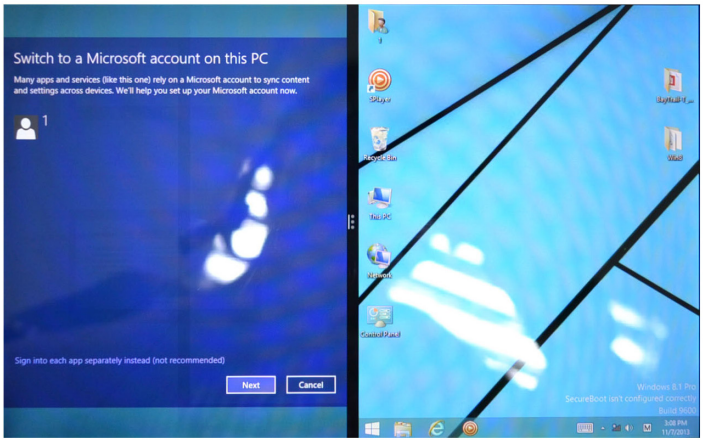
Switch to a Microsoft account on this PC
Many apps and services (like this one) rely on a Microsoft account to sync content and settings across devices. We'll help you set up your Microsoft account now.
1
Sign into each app separately instead (not recommended)
Next
Cancel

Figure 2

IV. BASIC OPERATIONS

1. Dormancy, restart and power off

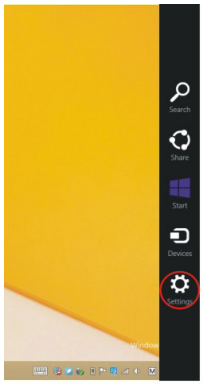

2. Security Management

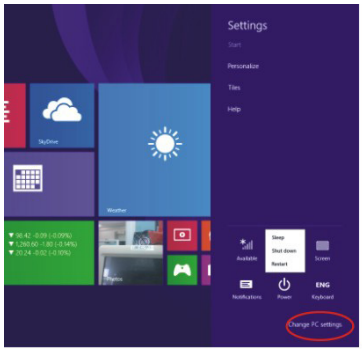

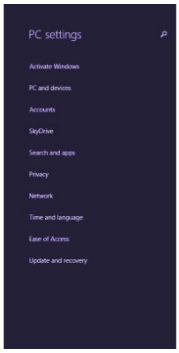

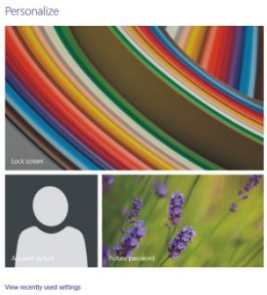

User and password setup

Method for quick setup:
Click the “Setup” button in “Charm” setup, and select “Change computer setup”. Select “User” on the left and click “Create local account” in “Your account” on the right side. After inputting the password of Complete Windows Live Id Account, input username, password, confirm password and password prompt.

PRODUCT DETAILS MWT-743G

Dimension: 187*106.8*9.5mm
Processor: Intel Bay Trail-T Z3735G 1.33GHz
Internal Memory: 16GB
RAM: 1GB
TF card: UP to 32G
Display: 7 inch capacitive touch screen
Resolution: IPS 1024*600
Battery: 2800mAh 3.7V
In Standby time: About 120 hours
Play Video time: About 4 hours
USB: micro USB 2.0
Camera Front: 0.3MP
Camera Back: 2.0MP
G-sensor 3D
GPS: Built-in
Bluetooth: Built-in Bluetooth 4.0
3G: Built-in, support WCDMA2100MHZ
Integrated Microphone
Wifi 802.11 b/g/n
Operating System: Windows 8.1 + Office 365
Video Play Format: up to HD 1080P; MP4/3GP/3G2/RM/RMVB/ASF/WMV/AVI MOV, VOB, FLV, TS, 3GP, etc…
Audio Play Format: MP1, MP2, MP3/WMA/FLAC/WAV/RA/OGG/ 3GP, AAC etc…
Image Format: JPG, JPEG, BMB, GIF,PNG, etc;
Network application: WWW browser, You Tube, Facebook, Skype, Email POP3/SMTP/IMAP4, flash 11.1
Color of TP: White
Color of Back Case: White

INFORMATION FOR USERS

Pursuant to Legislative Decree no. 49 of 14 March 2014 “Attuazione della Direttiva 2012/19/UE sui rifiuti di apparecchiature elettriche ed elettroniche (RAEE)”

The symbol of the crossed out wheeled bin on the equipment indicates that the product must be collected separately from other waste at the end of its useful life. Therefore, the user must turn in the equipment, complete with all its essential components, at the end of its useful lifetime to an appropriate centre for separate collection of electrical and electronic waste. The user may also take to the retailer at the time new equipment of an equivalent type is purchased, trading one item for one item, or one item for zero items for devices measuring less than 25 cm on the longest side. Suitable separate collection for ensuring that the equipment is recycled, handled and disposed of compatibly with environmental obligations prevents possible negative effects on the environment and human health. It also favours the recycling of the materials that the device is made of. Improper disposal of the product by the user implies the application of administrative penalties as per D. Lgs n. Legislative Decree no. 49 of 14 March 2014.

Return the product to the retailer at the time of purchasing another equivalent product; trade one item to one item.

Information on the SAR certification (Specific Absorption Rate)

The device is compliant with European Union (EU) standards that limit human exposure to radio frequencies (RF) issued by telecommunication devices and radios. These standards prevent the sale of mobile devices that exceed a level of maximum exposure (also called SAR) equal to 2.0 W/kg.

During the test, the highest SAR level recorded for this model was < 1,0 W/kg. During normal use, the actual SAR level may be much lower, since the device was designed to emit only the radio frequency energy needed to transmit the signal to the closest base station. Through the automatic issuance of energy at lower levels where possible, the device reduces the overall exposure to radio frequency energy for users.

The product works with batteries covered by European directive 2006/66/CE, which may not be disposed of with normal household waste. Inquire about local regulations relating to the separate collection of batteries: proper disposal prevents negative consequences for the environment and health.

Produced by:
Future Graphics spa
Via Domenico Fontana 12 - 00185 Rome - Italy

MADE IN CHINA
We the manufacturers, Future Graphics SPA, hereby declare that the product Miia MWT-743G meets the requirements of the R&TTE Directive (EC).
The complete Declaration of Conformity is available from the company: Future Graphics SPA, Via Domenico Fontana, 12 - 00185 Rome